


THERMOSTAT INSTALLATION MANUAL

Robertshaw

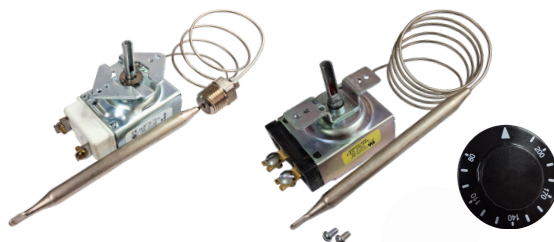

1. THE THERMOSTAT MUST NOT BE USED AS AN ON/OFF SWITCH. THE EQUIPMENT MUST HAVE ITS OWN ON/OFF SWITCH OR CIRCUIT BREAKER.
2. CAREFULLY OBSERVE THE ELECTRICAL SPECIFICATIONS AND THE CORRECT HANDLING PROCEDURES FOR THE THERMOSTAT BEFORE INSTALLING IT IN THE EQUIPMENT.
3. THE THERMOSTAT MUST NEVER BE OPENED. NEVER CHANGE THE POSITION OF THE CALIBRATION SCREW.
4. THE THERMOSTAT MUST NOT BE EXPOSED TO HUMID ENVIRONMENTS, IMMERSSED IN LIQUIDS, OR EXPOSED TO CORROSIVE OR OXIDIZING LIQUIDS OR VAPORS.
5. THE THERMOSTAT MUST NOT BE SUBJECTED TO IMPACTS OR DROPS.
6. THE ELECTRICAL TERMINALS OF THE THERMOSTAT MUST NEVER BE SOLDERED TO WIRING HARNESSSES OR WIRES.
7. THE ELECTRICAL TERMINALS MUST NOT BE DRILLED, AND ANY CHANGE TO THEIR ORIGINAL ANGLE MAY DAMAGE THE MECHANICAL ACTUATION SYSTEM.
8. THE SENSING BULB AND CAPILLARY TUBE MUST NOT BE CRUSHED, TWISTED, KINKED, OR BENT.
9. NEVER STRETCH THE CAPILLARY TUBE. ALWAYS UNCOIL IT CAREFULLY. IF BENDING IS NECESSARY, USE A MINIMUM BEND RADIUS OF 10 MM. TAKE CARE NOT TO CRUSH OR KINK IT.
10. MAKE SURE THE CAPILLARY TUBE AND/OR SENSING BULB DO NOT COME INTO CONTACT WITH LIVE ELECTRICAL PARTS OR OVERHEATED AREAS OF THE EQUIPMENT.

FOR ANY ADDITIONAL INFORMATION, PLEASE CONTACT US. WE WILL BE PLEASED TO ASSIST YOU.

EMAIL: IMEXPORT@IMEXPORT.COM.BR

IMEXPORT IND. COM. IMP E EXP. LTDA

Av. Júlio de Castilhos, 3898 | 95012-484 | Caxias do Sul | RS | Brazil

PHONE: 0XX 54-3225-4122 | www.imexport.com.br